

How do you know when your blast hose needs replacing?

IF THE BLAST HOSE IS WEAKENED INTERNALLY, IT WILL:

- Collapse when you pick it up
- Feel squishy if you step on it
- Instantly squash all the way under your foot
- Be soft and capable of collapsing on itself by pinching it with two fingers

It is recommended that you check every foot of the hose as you unroll it around your jobsite.

WHERE ARE THE FEW AREAS THAT ARE THE HIGHEST WEARING AND SHOULD BE CHECKED DAILY?

- At the blast pot
- At the entrance to the tank or structure
- Last 25ft of the hose near the operator



Call Blast-One today to order your next blast hose